


C0388-A00-01



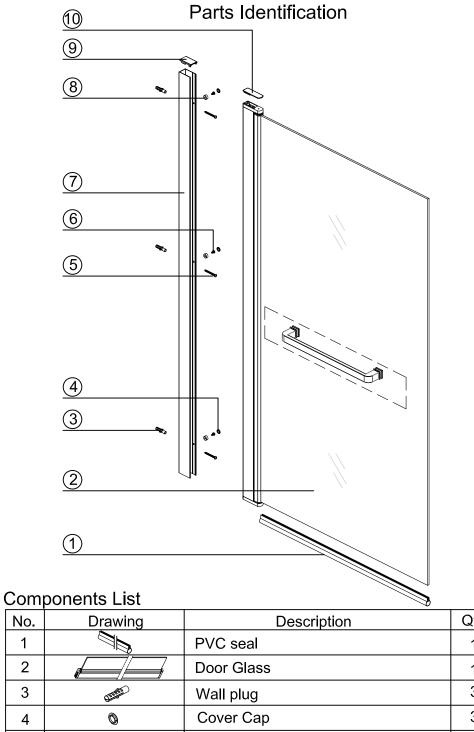


| | 1 | · · · · · · · · · · · · · · · · · · · | |
|-----|--------------|---------------------------------------|-----|
| No. | Drawing | Description | Qty |
| 1 | | PVC seal | 1 |
| 2 | | Door Glass | 1 |
| 3 | DITTE | Wall plug | 3 |
| 4 | 0 | Cover Cap | 3 |
| 5 | | No.8x1 3/4" Pozi Pan Screw | 3 |
| 6 | A | No.8x 3/8" Pozi Pan Screw | 3 |
| 7 | | Wall Profile | 1 |
| 8 | ® | Fitting | 3 |
| 9 | \Q | Profile Cap | 1 |
| 10 | | Vertical Stile Cap | 1 |

---- optional, if applicable



Tools required

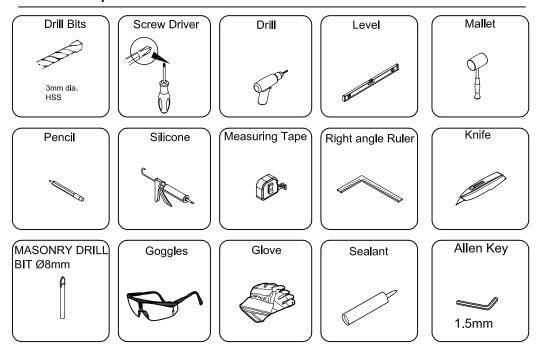

Things to check before you start


*Check that the bath has been installed correctly and that it is level, tiled down onto and sealed to the manufacturer'guidelines.

*check


- *Ensure the product is fitted to a non-porous surface ie. tiled and that the shower area is water proof. Check that the wall surface is flat.
- *Unpack and check the product is complete and undamaged.
- *Please check you are happy with the product before installing it.
- *Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type.
- -if in doubt seek professional advice
- *Ensure the area is clean, dry and dust free.
- *Read the instructions in full.
- *Have the correct tools available, see "Tools Required"
- *Plese dispose of all packaging with due regard to the environment.



LEVEL

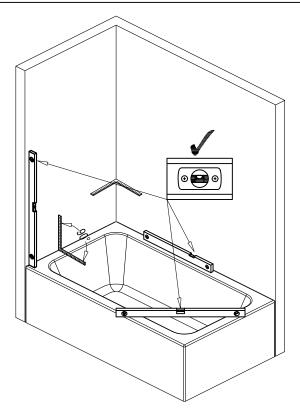



Verify screen location is level, plumb, and square. Check dimensions of bath to ensure proper fit of screen

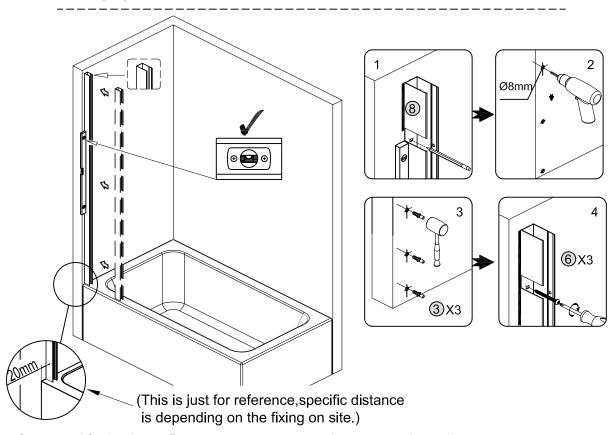




Installation

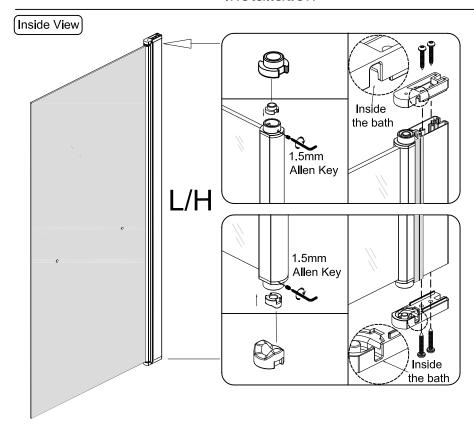

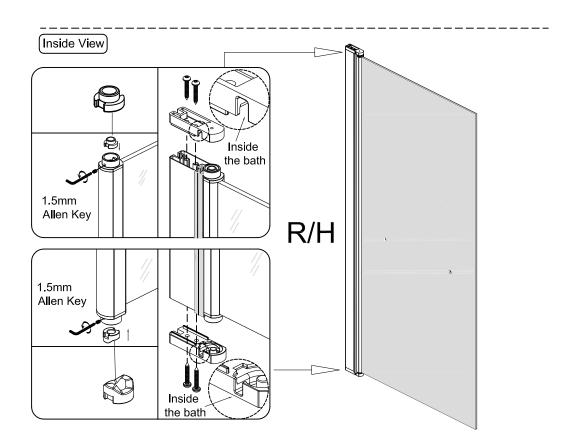


If you need further help , Please contact your local depot www.ctb.co.uk

Installation Door Glass

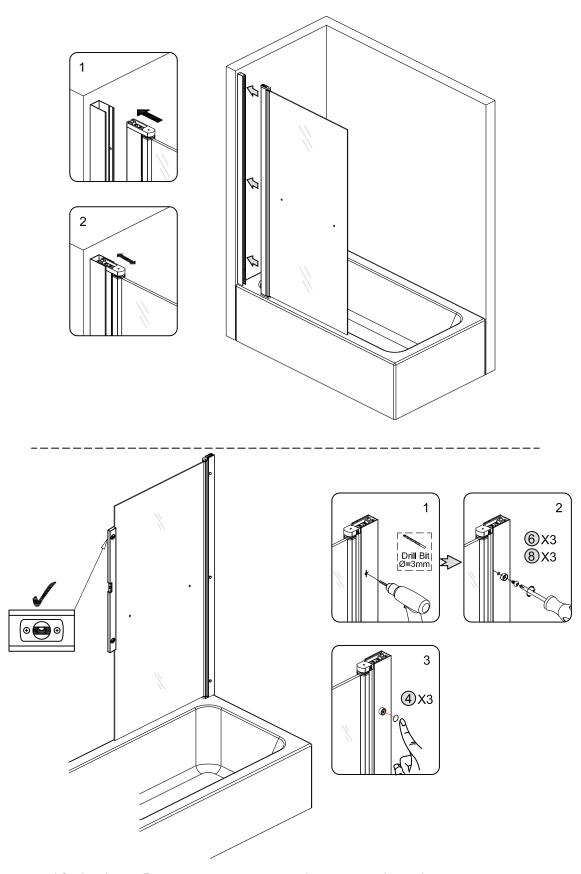


If you need further help , Please contact your local depot www.ctb.co.uk

Installation PVC seal & Profile cover

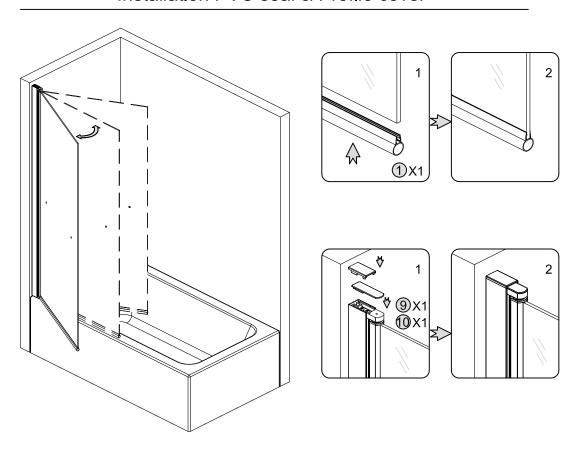

Installation Towel Bar (If applicable)

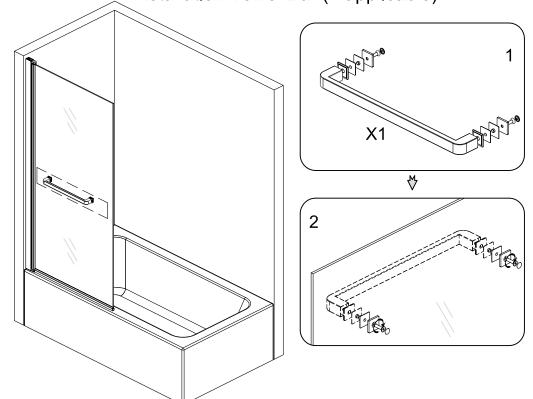

Sealing

