


C0392-A00-01




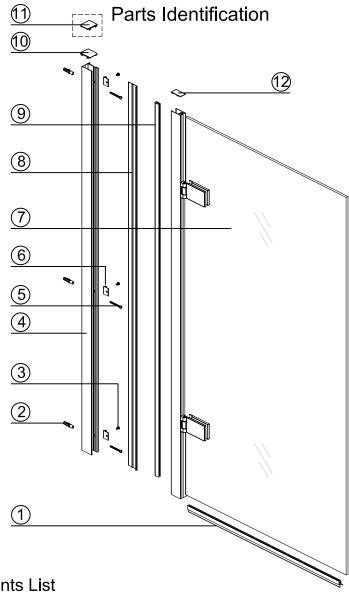

Com	ponents List	4	
No.	Drawing	Description	Qty
1		PVC seal "A"	1
2	GENET	Wall plug	3
3	A	No.8x 3/8" Pozi Pan Screw	3
4		Wall Profile	1
5	1	No.8x1 3/4" Pozi Pan Screw	3
6	Œ	Clip	3
7		Door Glass	1
8		Profile cover	1
9		PVC seal "B"	1
10	\Diamond	Left Cap	1
11	\bigcirc	Right Cap	1
12	⋄	Vertical Stile Cap	1



Tools required

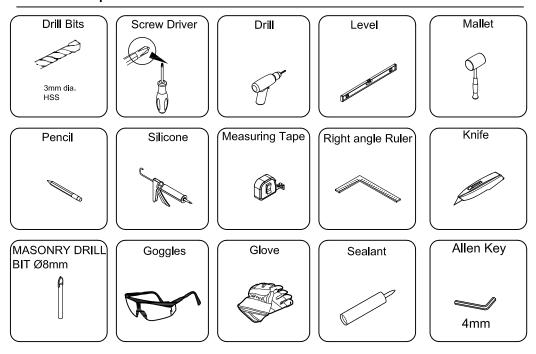

Things to check before you start


*Check that the bath has been installed correctly and that it is level, tiled down onto and sealed to the manufacturer'guidelines.

*check


- *Ensure the product is fitted to a non-porous surface ie. tiled and that the shower area is water proof. Check that the wall surface is flat.
- *Unpack and check the product is complete and undamaged.
- *Please check you are happy with the product before installing it.
- *Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type.
- -if in doubt seek professional advice
- *Ensure the area is clean, dry and dust free.
- *Read the instructions in full.
- *Have the correct tools available, see "Tools Required"
- *Plese dispose of all packaging with due regard to the environment.




LEVEL

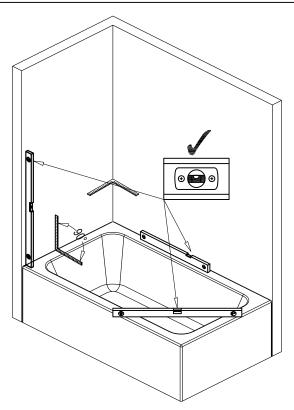


Verify screen location is level, plumb, and square. Check dimensions of bath to ensure proper fit of screen

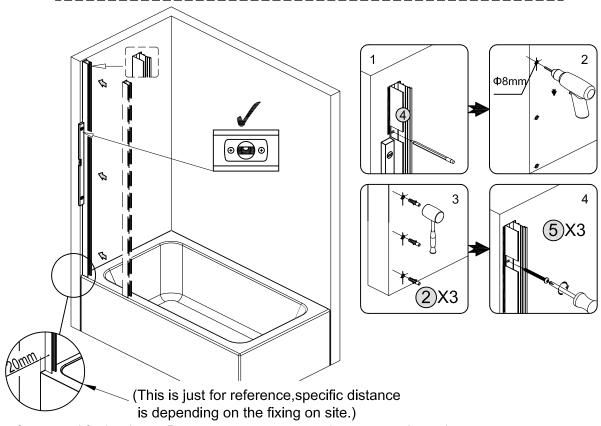

Installation Door Glass

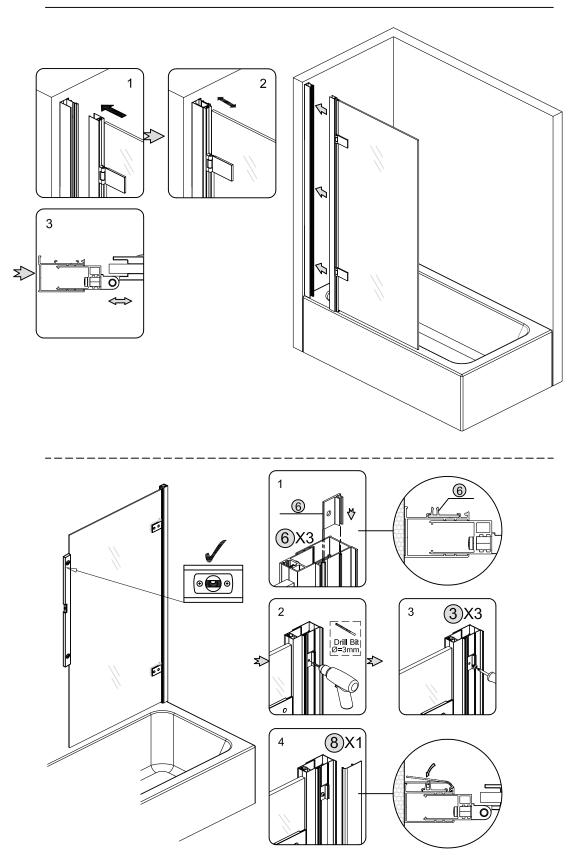

Installation

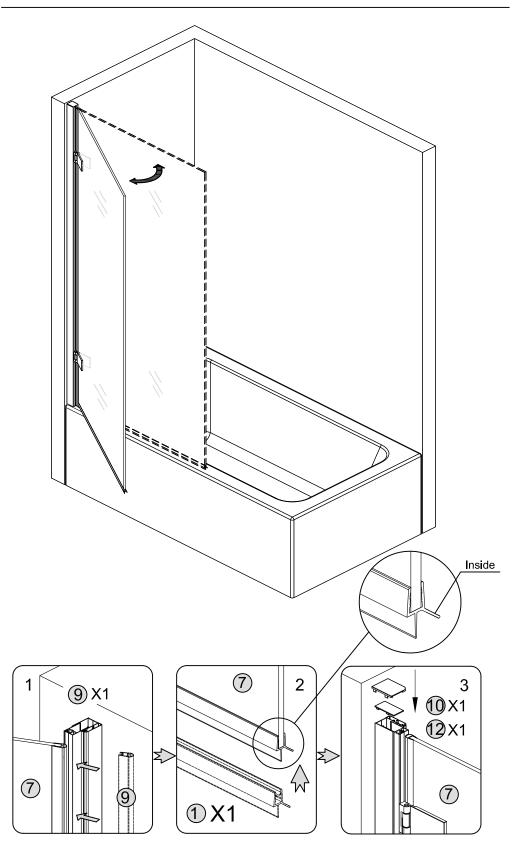



Sealing

